OLYMPUS

Quick Start Guide
FE-220/X-785

Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

© 2007 OLYMPUS IMAGING CORP.
Printed in China

VH933601

1 Gather these items (box contents)

Digital camera

Strap


Lithium Ion Battery (LI-42B)

Battery Charger (LI-40C)

USB Cable

AV Cable

OLYMPUS Master CD-ROM

Other items
- Basic manual
- Advanced manual
- Warranty card

Contents may vary depending on purchase location.

Attach the strap

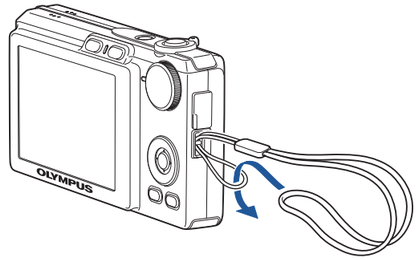

● Pull the strap tight so that it does not come loose.

2 Prepare the battery

a. Charge the battery

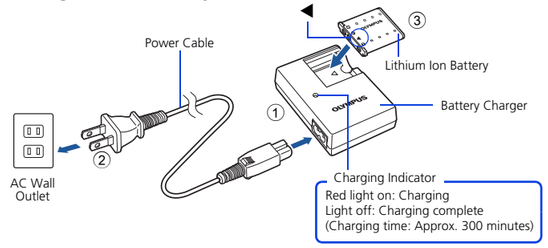

● Battery comes partially charged.

b. Insert the battery in the camera

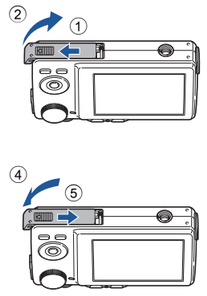

● Insert the battery in the direction indicated by the ▼ mark.

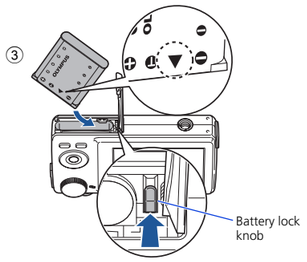

● To remove the battery, press the battery lock knob in the direction of the arrow.

● This camera does not require an optional xD-Picture Card™ (hereinafter referred to as "the card") to take pictures. For details on inserting an optional Card, please refer to Advanced Manual.

3 Turn the camera on

This section explains how to turn on the camera in shooting mode.

a. Set the mode dial to AUTO

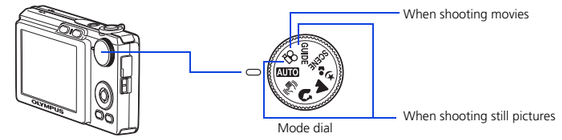

Still picture shooting modes

AUTO	The camera determines the optimum settings and shoots the picture.
	This function reduces the blur caused by a moving subject or camera movement when taking pictures.
	Suitable for taking pictures of people.
	Suitable for taking pictures of landscapes.
	Suitable for taking pictures of people at night.
SCENE	You can select a scene mode from among 10 set for various shooting conditions.
GUIDE	This function allows you to take the best picture by following the shooting guide displayed on the screen.

b. Press the POWER button

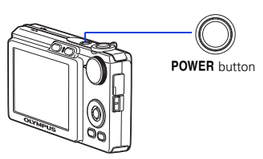

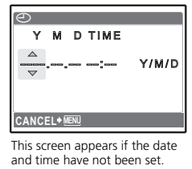

This screen appears if the date and time have not been set.

● To turn off the camera, press the **POWER** button again.

Hint

The directions of the arrow pad (△▽◁▷) are indicated with △▽◁▷ in this manual.



4 Set date and time

About the date and time setting screen

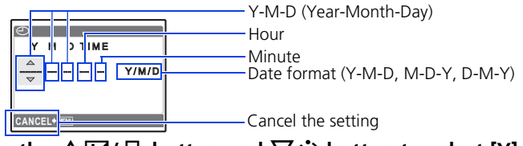

a. Press the △/□ button and ▽ button to select [Y].

● The first two digits of the year are fixed.

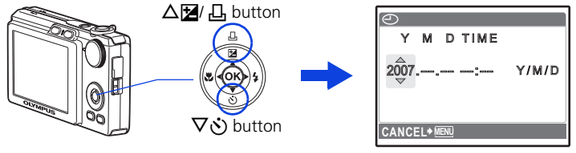

b. Press the ▷ button.

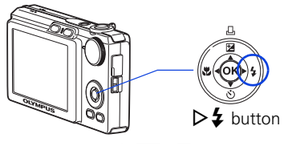

c. Press the △/□ button and the ▽ button to select [M].

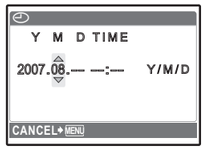

d. Press the ▷ button.

e. Press the △/□ button and the ▽ button to select [D].

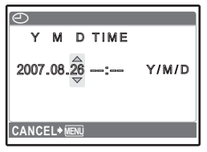

f. Press the ▷ button.

g. Press the △/□ button and the ▽ button to select "hour" and "minute".

● The time is displayed in the 24-hour format.

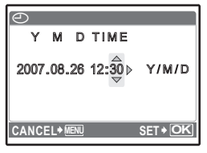

h. Press the ▷ button.

i. Press the △/□ button and ▽ button to select [Y/M/D].

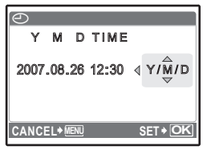

j. After all items have been set, press the ⓞ button.

● For a more accurate setting, you can press the ⓞ button when the time signal hits 00 seconds.

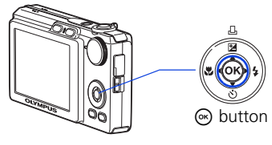

5 Take a picture

a. Hold the camera

Horizontal grip

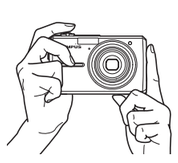

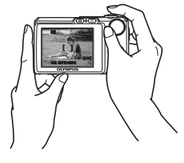

Vertical grip

b. Focus

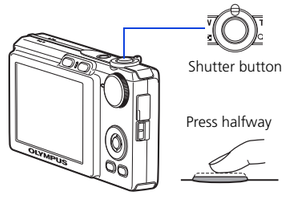

Place this mark over your subject.

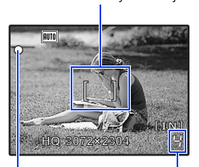

The number of still pictures you can store is displayed.

The green lamp indicates that the focus and exposure are locked.

c. Shoot

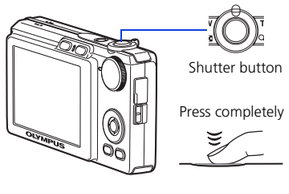

The card access lamp blinks.

6 Review your pictures

a. Press the ▶ button.

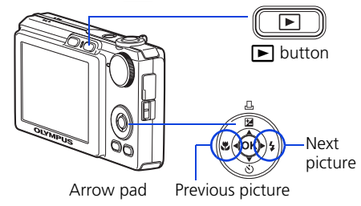

Erase pictures

a. Press the ◁ button and the ▷ button, to display the picture you want to erase.

b. Press the 🗑 button.

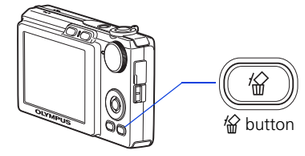

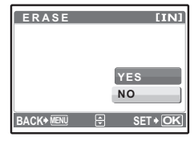

c. Press the △/□ button to select [YES] and press the ⓞ button.

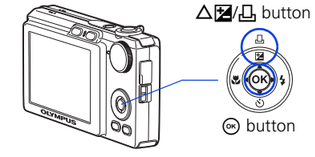

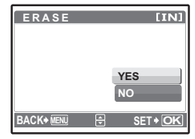

OLYMPUS

Guia de iniciação rápida FE-220/X-785

Começar aqui

Para maiores informações, consulte os Manuais Básico e Avançado ou visite a página web: www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

1 Reúnir estes itens (conteúdo da caixa)

Câmara Digital

Correia

Bateria de iões de lítio (LI-42B)

Carregador de bateria (LI-40C)

Cabo USB

Cabo AV

CD-ROM OLYMPUS Master

Outros itens
- Manual Básico
- Manual Avançado
- Cartão de garantia

O conteúdo pode variar conforme o local de aquisição.

Colocar a correia

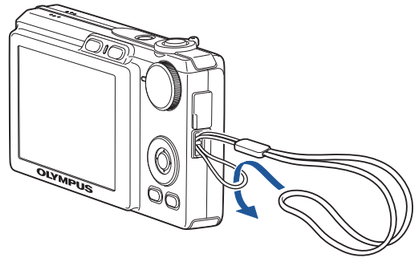

● Puxar bem a correia de modo que não fique frouxa.

2 Preparar a bateria

a. Carregue a bateria

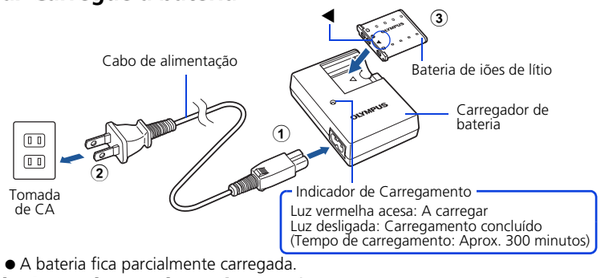
Cabo de alimentação
Bateria de iões de lítio
Carregador de bateria
Tomada de CA
Indicador de Carregamento
Luz vermelha acesa: A carregar
Luz desligada: Carregamento concluído
(Tempo de carregamento: Aprox. 300 minutos)

● A bateria fica parcialmente carregada.

b. Introduza a bateria na câmara

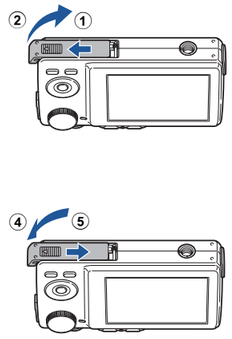

● Introduza a bateria na direcção indicada pela marca ▼.

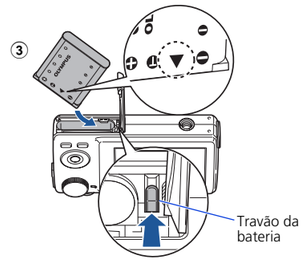

● Para remover a bateria, prima o travão da bateria na direcção indicada pela seta.

● Esta câmara não precisa de um xD-Picture Card™ opcional (designado a partir daqui apenas "cartão") para tirar fotografias. De modo a obter informações sobre como introduzir um cartão opcional, consulte o Manual Avançado.

3 Ligar a câmara

Esta secção explica como ligar a câmara no modo fotografia.

a. Ajuste o selector de modo para AUTO

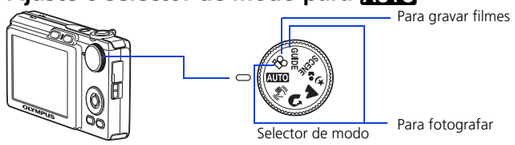

Modos de fotografia

AUTO	A câmara determina as definições óptimas e regista a imagem.
	Esta função reduz o efeito de arrastamento causado por um objecto móvel ou movimento da câmara quando fotografar imagens.
	Indicado para fotografar fotografias tipo retrato.
	Indicado para fotografar paisagens.
	Indicado para fotografar pessoas à noite.
SCENE	Pode seleccionar um dos 10 modos de cena definidos para as várias condições de filmagem.
GUIDE	Esta função permite-lhe tirar melhores fotografias seguindo o guia de fotografia mostrado no ecrã.

b. Prima o botão POWER

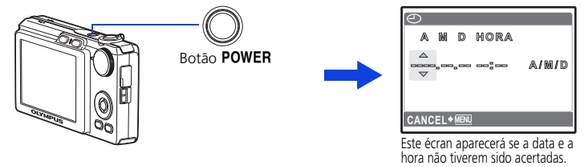

Este écran aparecerá se a data e a hora não tiverem sido acertadas.

● Para desligar a câmara, prima o botão **POWER** novamente.

Dica

Nete manual, as direcções do selector em cruz (△▽◁▷) estão indicadas com △▽◁▷.



4 Acertar data e hora

Acerca do ecrã de acerto da data e da hora

a. Prima o botão △/ e o botão ▽ para seleccionar [A].

● Os primeiros dois dígitos do ano são fixos.

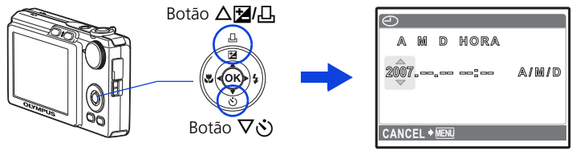

b. Prima o botão ▷.

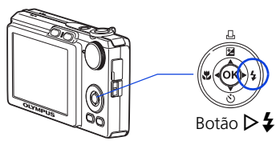

c. Prima o botão △/ e o botão ▽ para seleccionar [M].

d. Prima o botão ▷.

e. Prima o botão △/ e o botão ▽ para seleccionar [D].

f. Prima o botão ▷.

g. Prima o botão △/ e o botão ▽ para seleccionar "hora" e "minuto".

● A hora é exibida no formato de 24 horas.

h. Prima o botão ▷.

i. Prima o botão △/ e o botão ▽ para seleccionar [A/M/D].

j. Após todos os parâmetros terem sido definidos, prima o botão (OK).

● Para uma definição mais precisa, pode-se premir o botão (OK) quando o sinal de hora chegar aos 00 segundos.

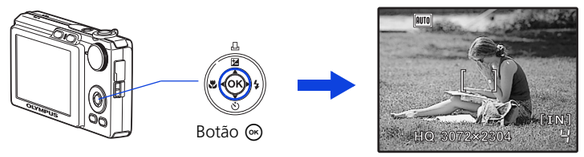

5 Fotografar

a. Segurar a câmara

b. Focar

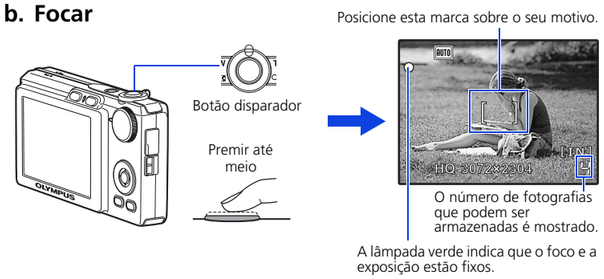
Botão disparador
Premir até meio
Posicione esta marca sobre o seu motivo.
AUTO
HQ 3072×2304
[IN]
O número de fotografias que podem ser armazenadas é mostrado.
A lâmpada verde indica que o foco e a exposição estão fixos.

c. Fotografar

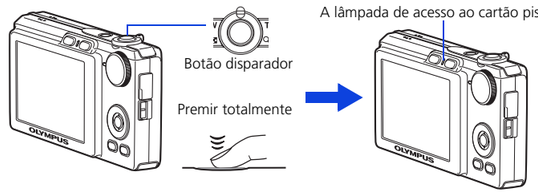

6 Ver as suas imagens

a. Prima o botão ▶.

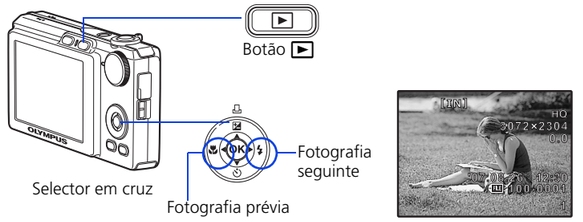

Apagar imagens

a. Prima o botão ◁ e o botão ▷ para fazer aparecer a imagem que deseja apagar.

b. Prima o botão .

c. Prima o botão △/ para seleccionar [SIM] e então prima o botão (OK).